























GSNF1



Gas Concrete Nailer



Cleaning Reference Guide

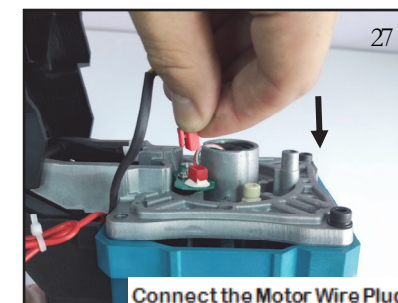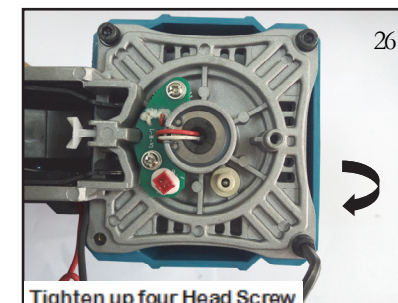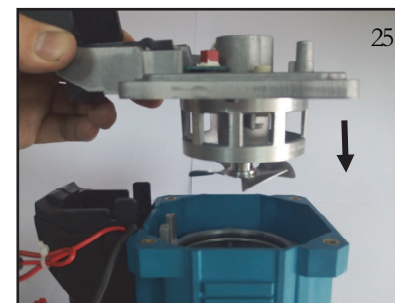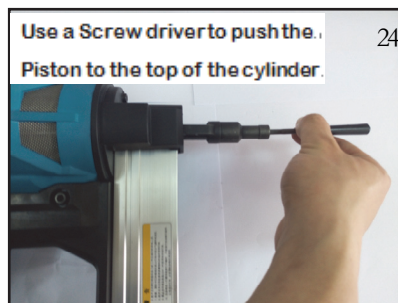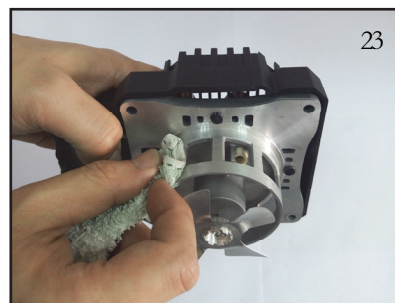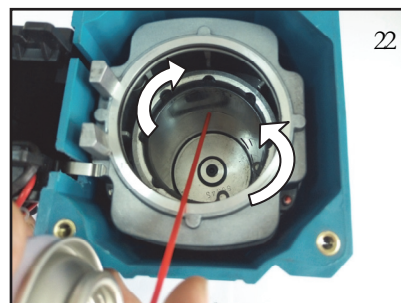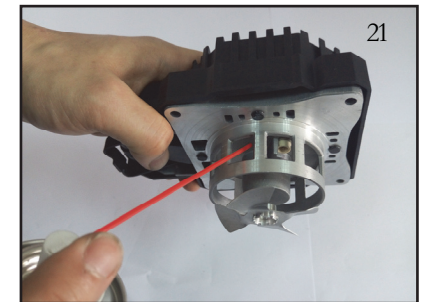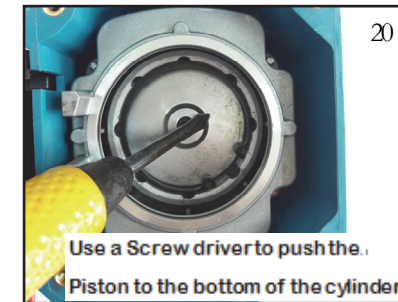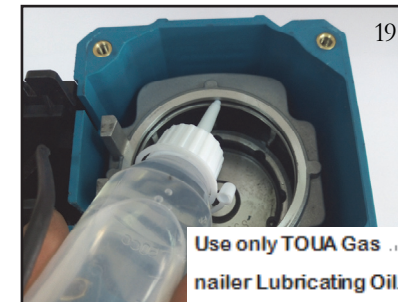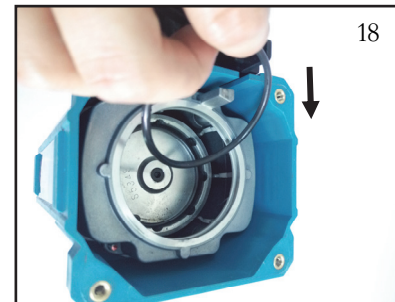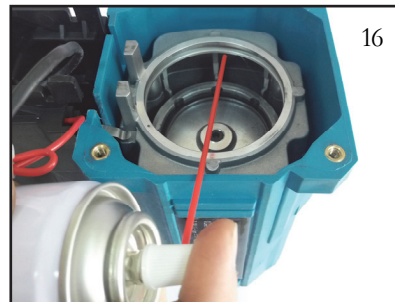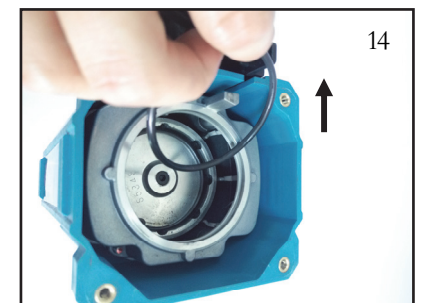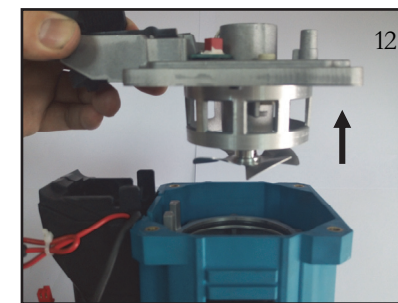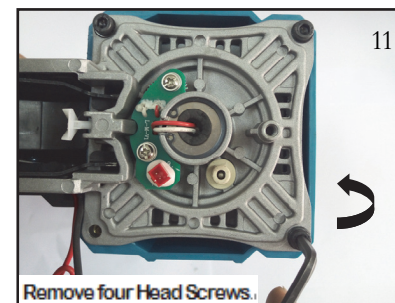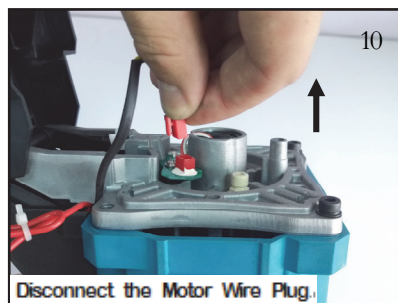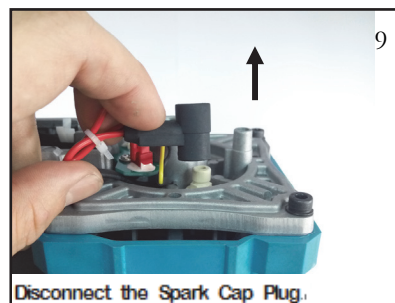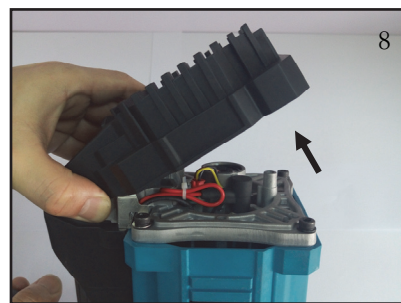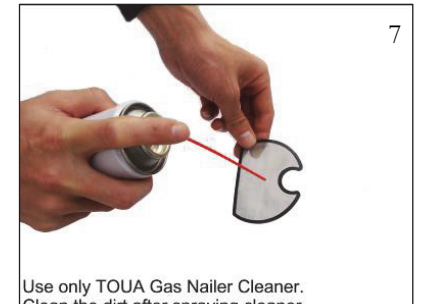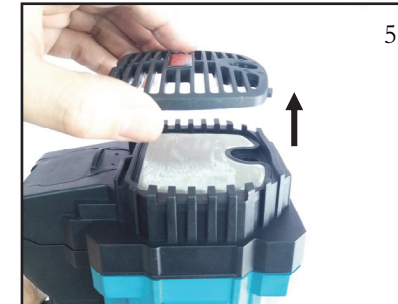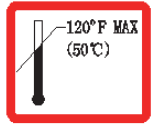

Remove the chamber head O-ring and the chamber O-ring

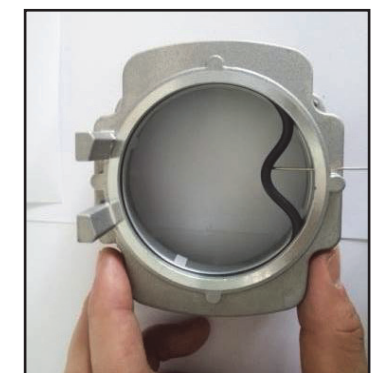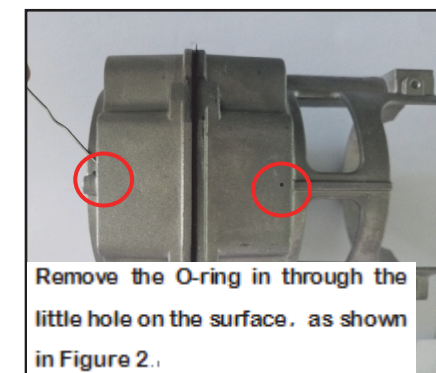




GSNF1

Gas Concrete Nailer


The Magazine Assembly Installing

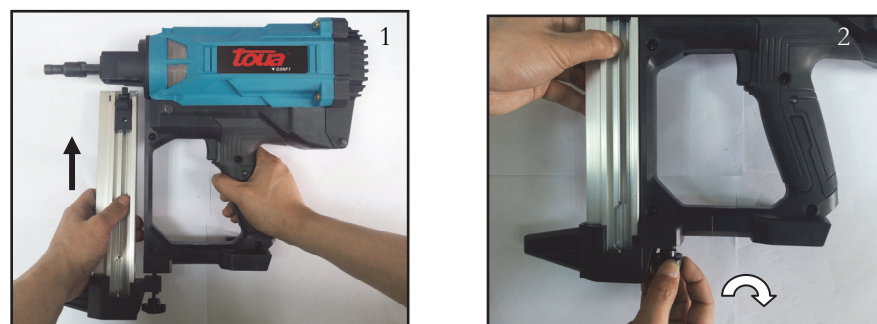

The Battery Charging and Installing



Insert the Fuel Cell Into Nailer

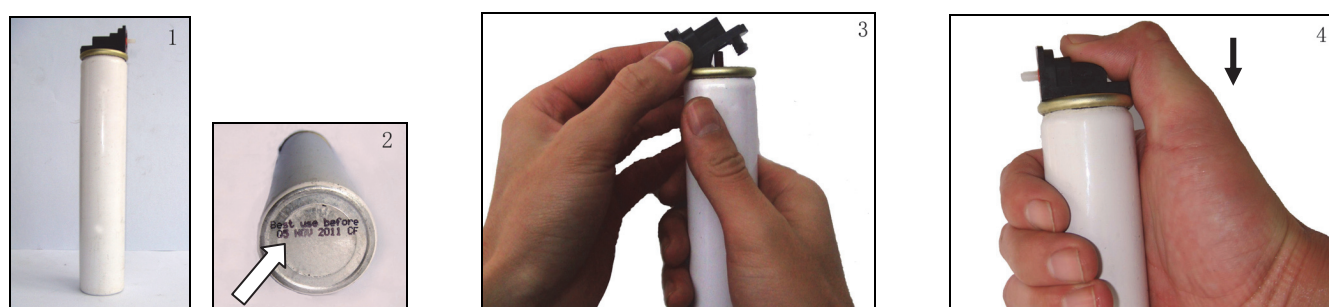


Cleaning Reference Guide




Loading Nails



Testing the Nailer

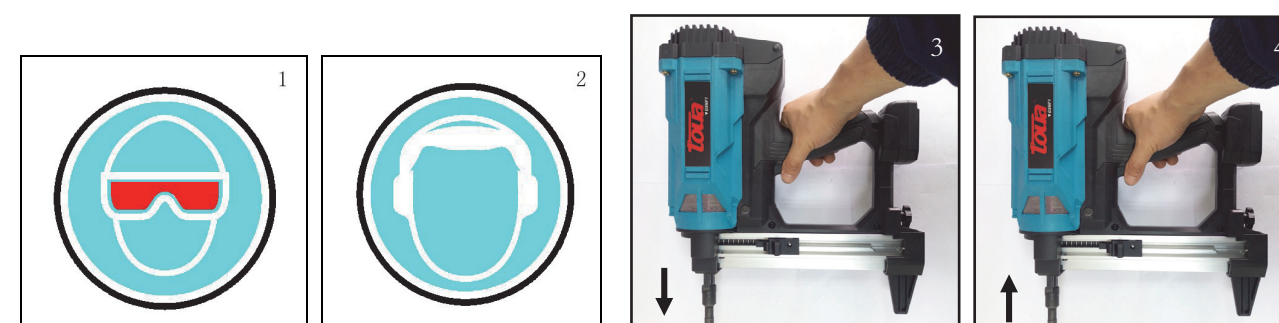

Nail Jam Remove

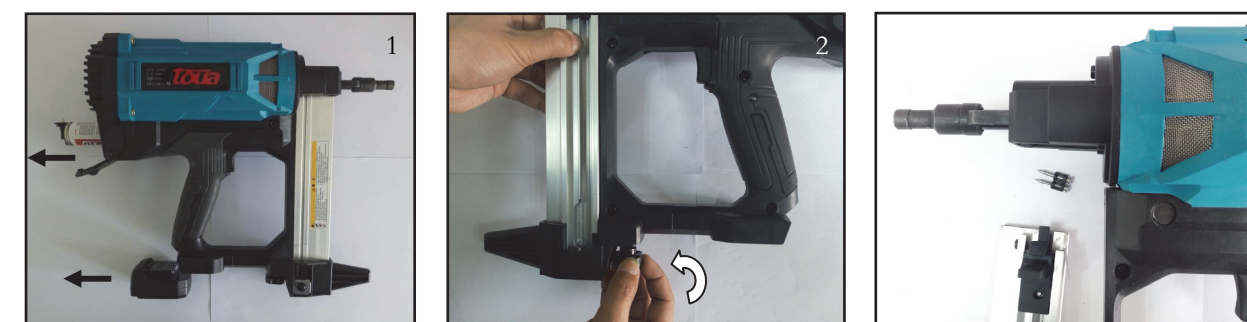

Circuit Connecting Instruction

